

AUGUST 2022

TRAINING BULLETIN


#TB10006

TOPIC

WATER TRANSFER PUMP SUPPLIED
COMPONENTS

MODEL REFERENCE

WATER PUMPS

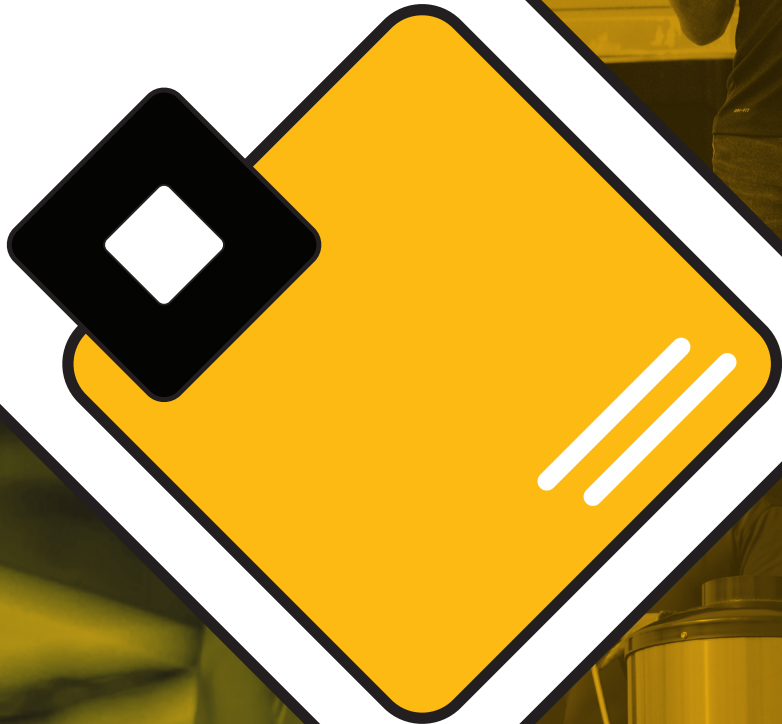

ISSUE:

THERE IS OFTEN QUESTIONS AS TO WHAT IS NEEDED TO CONNECT HOSES TO THE INLET AND OUTLET CONNECTIONS OF A WATER PUMP. ALL BE POWER WATER TRANSFER PUMPS HAVE MALE NPT THREADS ON THE INLET AND OUTLET CONNECTIONS. THE WATER TRANSFER PUMPS ARE SUPPLIED BY BE POWER WITH A VARIETY OF COMPONENTS THAT GIVE THE USER THE OPTION OF USING AN APPROPRIATELY SIZED BARE HOSE AND ATTACH IT TO THE PUMP. THE PREFERRED METHOD TO CONNECT HOSES TO THE PUMP IS TO INSTALL CAMLOCK FITTINGS TO ALLOW USING BE POWER HOSE KITS THAT ARE ALSO EQUIPPED WITH CAMLOCK FITTINGS.

MODELS RELATED:

WP-1020R

THE ABOVE MODEL COMES WITH:

- 2 - 1" FNPT "wing" style fittings a 1" Hose Barb
- 1 - Basket Strainer with 1" Hose Barb
- 3 - 1" Wire Hose Clamps
- To use BE Power hose kits, you would need to supply 2 camlock fittings:
- P/N 90.390.XXX (part number changes dependent on thread size)



MODELS RELATED:

WP-2070S
 WP2065K
 WP-2065HL
 WP-3070S
 WP-3065HL
 WP4013H

THE ABOVE MODEL COMES WITH:

- 2 - 2" FNPT "wing" style fittings and 2" Hose Barb
- 1 - Basket Strainer with 2" Hose Barb
- 3 - 2" Wire Hose Clamp
- To use BE Power hose kits, you would need to supply 2 camlock fittings:
- P/N 90.390.XXX (part number changes dependent on thread size)

**MODELS RELATED:**

TP-2065HT
 TP-3013HM
 TP-4013HM
 HP-2013HR

THE ABOVE MODEL COMES WITH:

- 1 - Basket Strainer with Hose Barb (hose barb size depends on pump size)
- 1 - Wire clamp (clamp size depends on pump size)
- To use BE Power hose kits, you would need to supply 2 camlock fittings:
- P/N 90.390.XXX (part number changes dependent on thread size)



MODELS RELATED:

TP-3070R
TP-3065HR

THE ABOVE MODEL COMES WITH:

- 2 - 3" FNPT Fittings with 3" Hose Barbs
- 1 - Basket Strainer with 3" Hose Barb
- 3 - 3" Wire Hose Clamp
- To use BE Power hose kits, you would need to supply 2 camlock fittings:
- P/N 90.390.XXX (part number changes dependent on thread size)



MODELS RELATED:

TP2065HR

THE ABOVE MODEL COMES WITH:

- 1 - 2" FNPT "wing" stile fitting with 2" Hose Barb
- 1 - 2" Basket Strainer with 2" Hose Barb
- 2 - 2" Wire Hose Clamps
- To use BE Power hose kits, you would need to supply 2 camlock fittings:
- P/N 90.390.XXX (part number changes dependent on thread size)

MODELS RELATED:

NP-2070R
NP2065K
NP-2065HR

THE ABOVE MODEL COMES WITH:

- 2 - 2" M x M NPT Adaptor
- 1 - 2" M x F 90Deg. Elbow
- 2 - 2" FNPT "wing" style fittings and 2" Hose Barb
- 1 - Basket Strainer with 2" Hose Barb
- 3 - 2" Wire Hose Clamp
- To use BE Power hose kits, you would need to supply 2 camlock fittings:
P/N 90.390.XXX (part number changes dependent on thread size)

**MODELS RELATED:**

NP-3070R
NP-3065HR

THE ABOVE MODEL COMES WITH:

- 2 - 3" M x M NPT Adaptor
- 1 - 3" M x F 90Deg. Elbow
- 2 - 3" FNPT "wing" style fittings and 3" Hose Barb
- 1 - Basket Strainer with 3" Hose Barb
- 1 - 3" Wire Hose Clamp
- To use BE Power hose kits, you would need to supply 2 camlock fittings:
P/N 90.390.XXX (part number changes dependent on thread size)



MODELS RELATED:

HP-2070R
HP-2065HR

THE ABOVE MODEL COMES WITH:

- 2 - 2" FNPT "wing" style fittings and 2" Hose Barb
- 1 - Basket Strainer with 2" Hose Barb
- 3 - 2" Wire Hose Clamp
- To use BE Power hose kits, you would need to supply 2 camlock fittings:
- P/N 90.390.XXX (part number changes dependent on thread size)



MODELS RELATED:

WP-1015HT

THE ABOVE MODEL COMES WITH:

- To use BE Power hose kits, you would need to supply 2 camlock fittings:
- P/N 90.390.XXX (part number changes dependent on thread size)